



Wall Mounted Monitor Arm

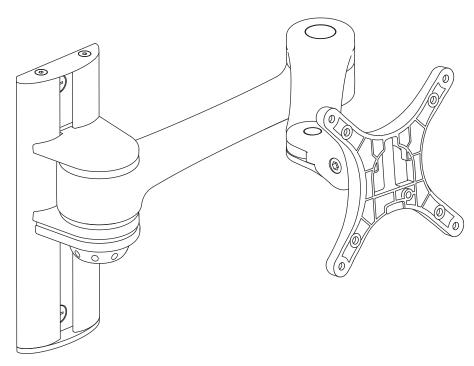


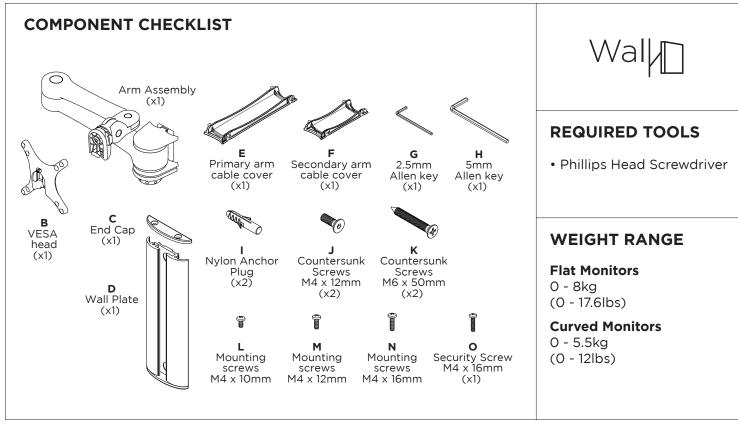


IMPORTANT INFORMATION

- ! Please ensure this product is installed as per these installation instructions.
- ! This product is compatible with the range of AF Poles and arms.
- The manufacturer accepts no responsibility for incorrect installation.
- ! Curved monitors, deep devices (such as all-in-one PCs) and offset VESA locations exert additional leverage that can exceed the capacity of the mount even though the monitor weight may be within the stated range. Please contact Atdec if you would like further information.


1. Position Wall Plate

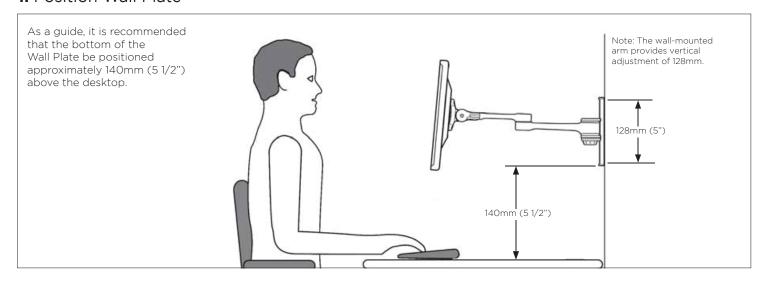


2. Choose the appropriate installation procedure depending on your wall type

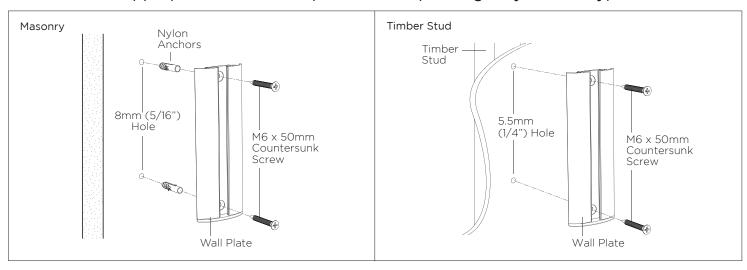


3. Mount Arm Assembly

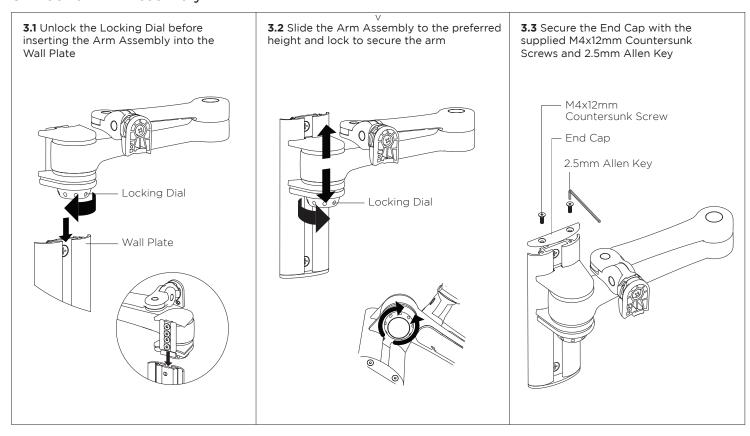


4. Install VESA monitor head

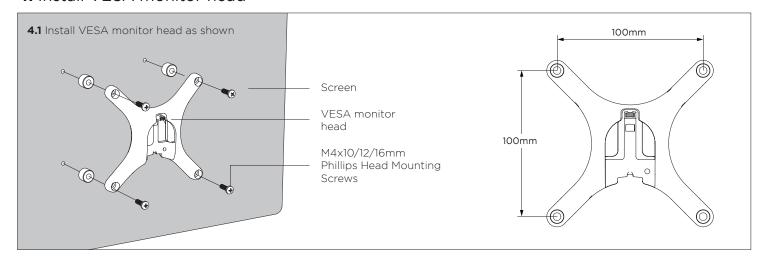


5. Mounting Monitor

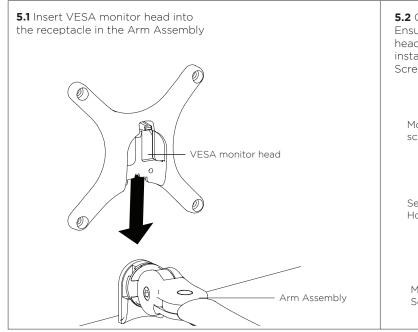


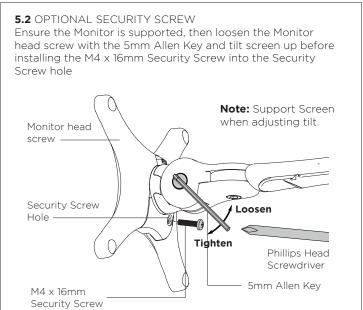

6. Adjusting Height

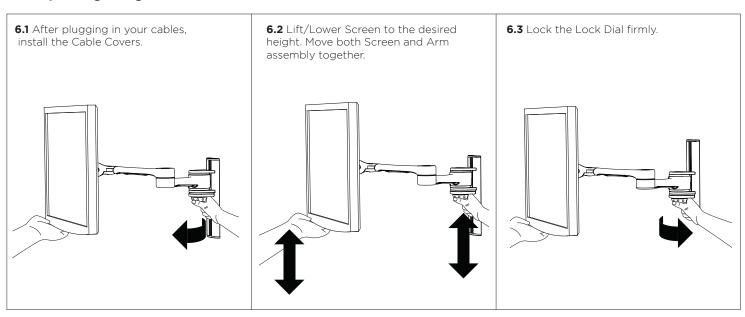

7. Cable Management

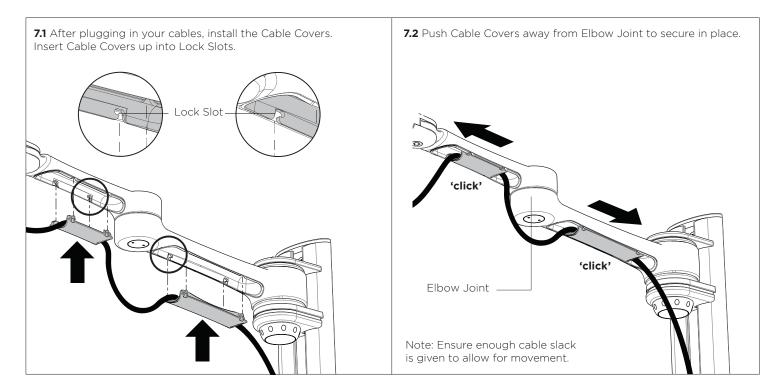

8. Adjusting the Display Bracket

