

Lock Instructions

SH-MDUC-C16S

SH-MDUC-C32S

Setting the Passcode for Combination Padlock

1. Set passcode to default (0-0-0-0) or use the last known passcode.
2. Open the front door of the charging station and leave it open for the steps below.
3. Rotate the outer dial to CLOSED.
4. Flip the internal switch on the door to position 2. PUBLIC.
5. Rotate the outer dial to OPEN.
6. Enter your new 4-digit passcode.
7. Rotate the outer dial back to CLOSED.
8. Flip the internal switch to 1. PRIVATE.
9. Close the door — your new passcode is now set.


Rear-Lock Access

1. Locate the divot (small notch) on the key.
2. Align the divot with the red dot on the rear lock of the Shintaro charging station.
3. Insert the key and turn to unlock

Outer Dial



Internal Switch

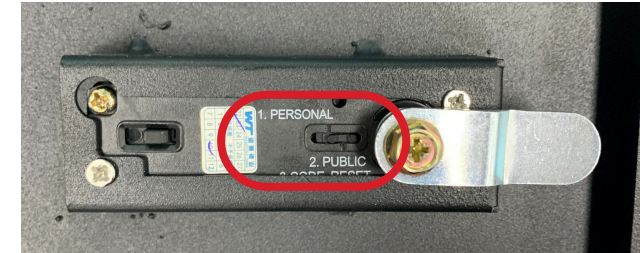

Rear Lock

