




Ora Bolt Through Fixing

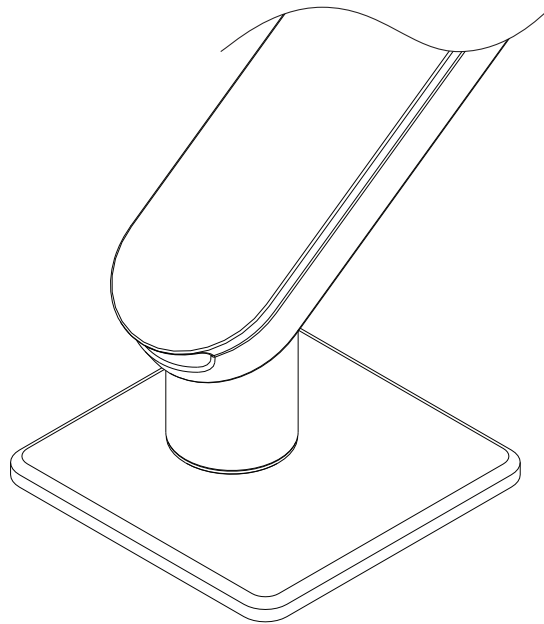

COMPONENT CHECKLIST

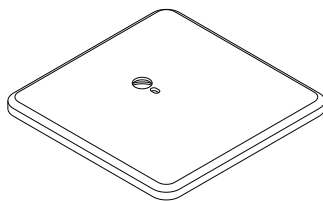

A
Clamp Plate
(x1)

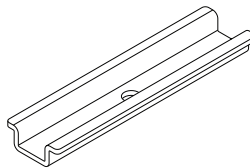

B
Clamp Bar
(x1)



C
Arm Spigot
(x1)



D
M8 Stud Bolt
(x1)



E
M8 Flange Nut
(x1)

Desk 



REQUIRED TOOLS

- 4mm Hex key (supplied with Ora arm)
- 8.5mm (or 1/32") drill bit
- Power Drill
- 13mm Spanner




IMPORTANT INFORMATION

- ! Please ensure this product is installed as per these installation instructions.
- ! The manufacturer accepts no responsibility for incorrect installation.
- ! This product is compatible with Atdec Ora products.
- ! The product is compatible with grommet hole sizes from 60-80mm.
- ! The product is compatible with desk thicknesses from 0-55mm.

1. For bolt through installations, drill hole in work surface

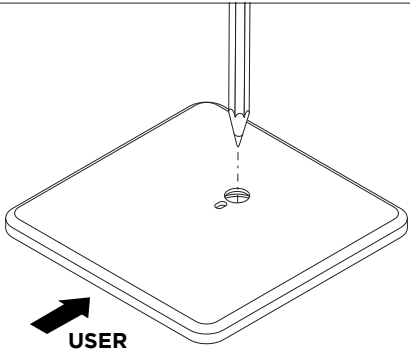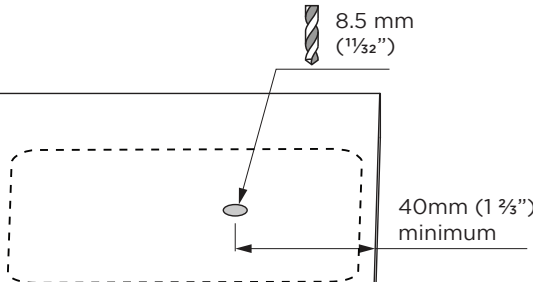
<p>1.1 Mark out hole position on the work surface. Use Clamp Plate A as a template.</p> 	<p>1.2 Drill the hole using a suitable drill bit. Ensure the hole is drilled perpendicular to the work surface.</p> 
-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

2. Attach Arm Spigot to Clamp Plate

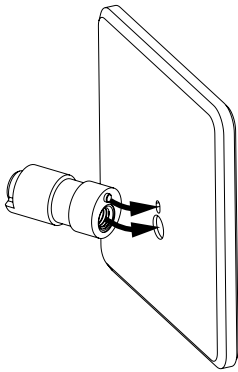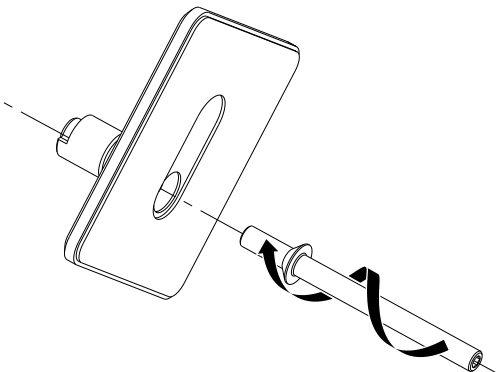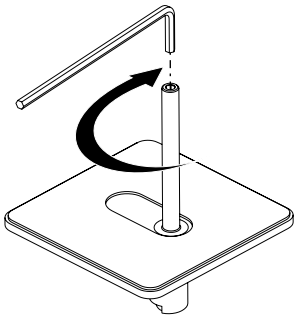
<p>TIP: Hold Arm Spigot C and Clamp Plate A together, locating the dimple in the slot, before hand tightening the screw into the spigot.</p> 	<p>2.1 Screw M8 Stud Bolt D through Clamp Plate A into Arm Spigot C.</p> 	<p>2.2 Tighten firmly with 4mm Hex Key supplied with Arm.</p> 
------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------

3. Attach plate assembly to desk

Place Clamp Bar **B** over M8 Stud Bolt **D** under the desk as illustrated and secure Flange Nut **E** with spanner.

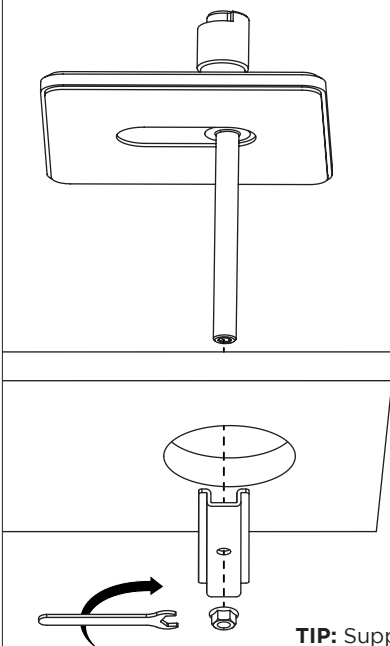

USER

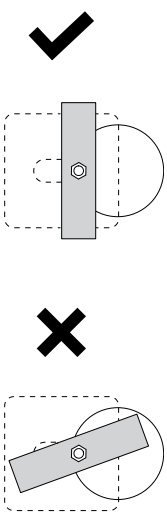

TIP: Support plate while tightening to maintain the correct orientation on the work surface.

4. Install Monitor Arm onto Fixing

Continue installation per Ora Monitor Arm installation guide.

AW-ORA-F

